



MBS-708CS

Metal Working Bandsaw

MBS708CS.....50000331T3~400V, 50Hz

PARTS LIST

Walter Meier (Tool) AG

Tämperlistrasse. 5
CH-8117 Fällanden
Switzerland

Phone +41 44 806 47 48

Fax +41 44 806 47 58


jetinfo.eu@waltermeier.com

www.jettools.com




P-50000331T 2011-05


Breakdown for the MBS708CS Transmission Assembly

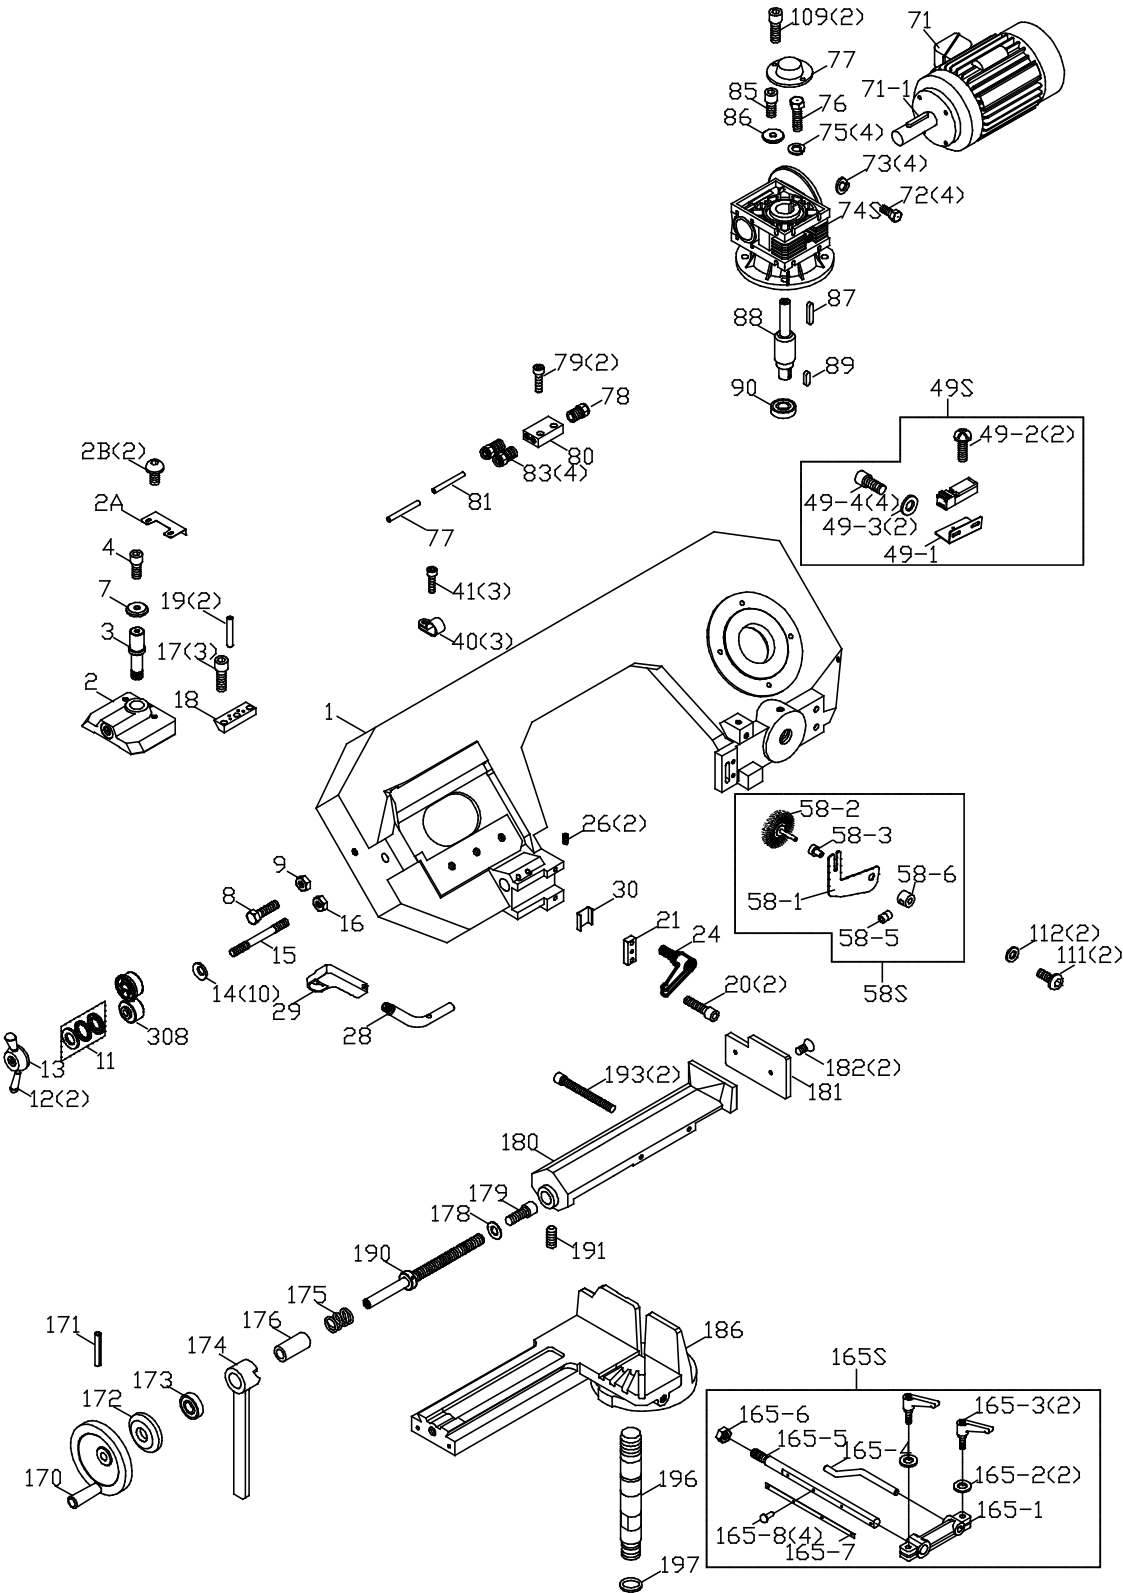

Breakdown for the MBS708CS Transmission Assembly

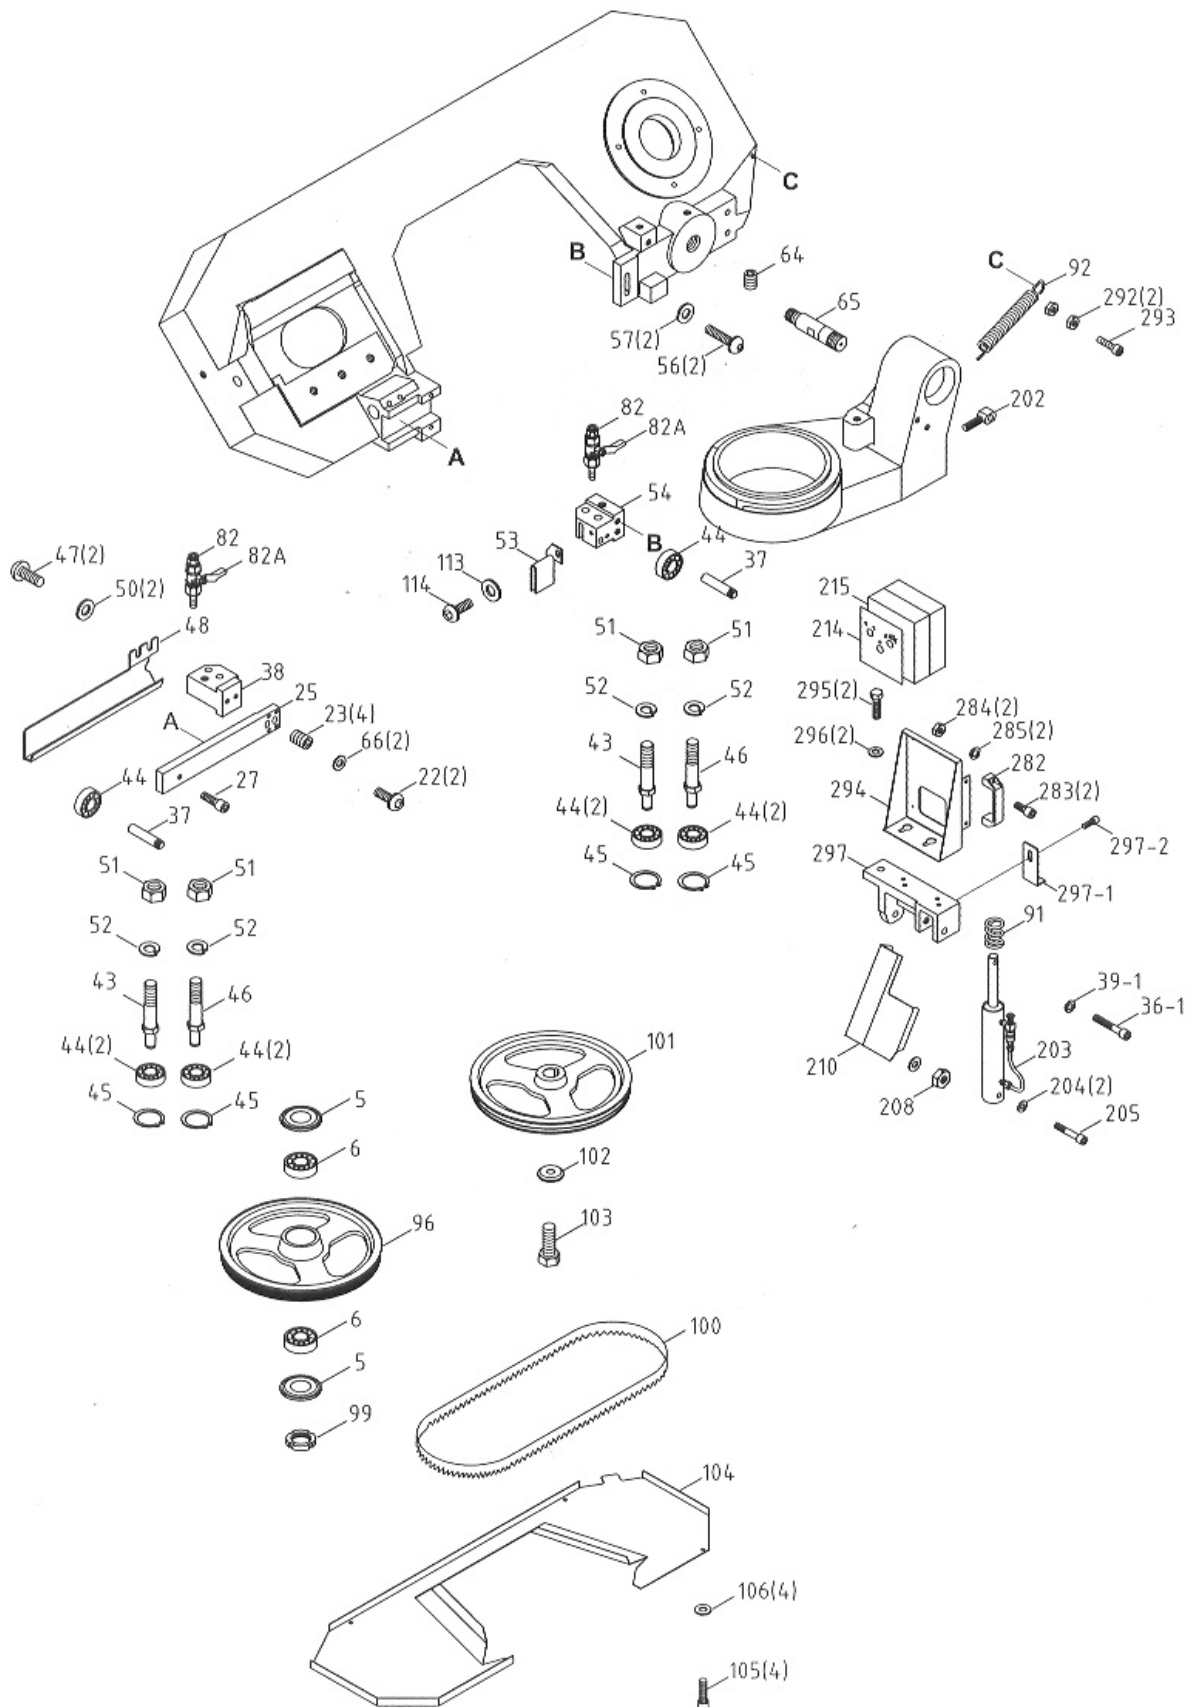

Breakdown for the MBS708CS Transmission Assembly

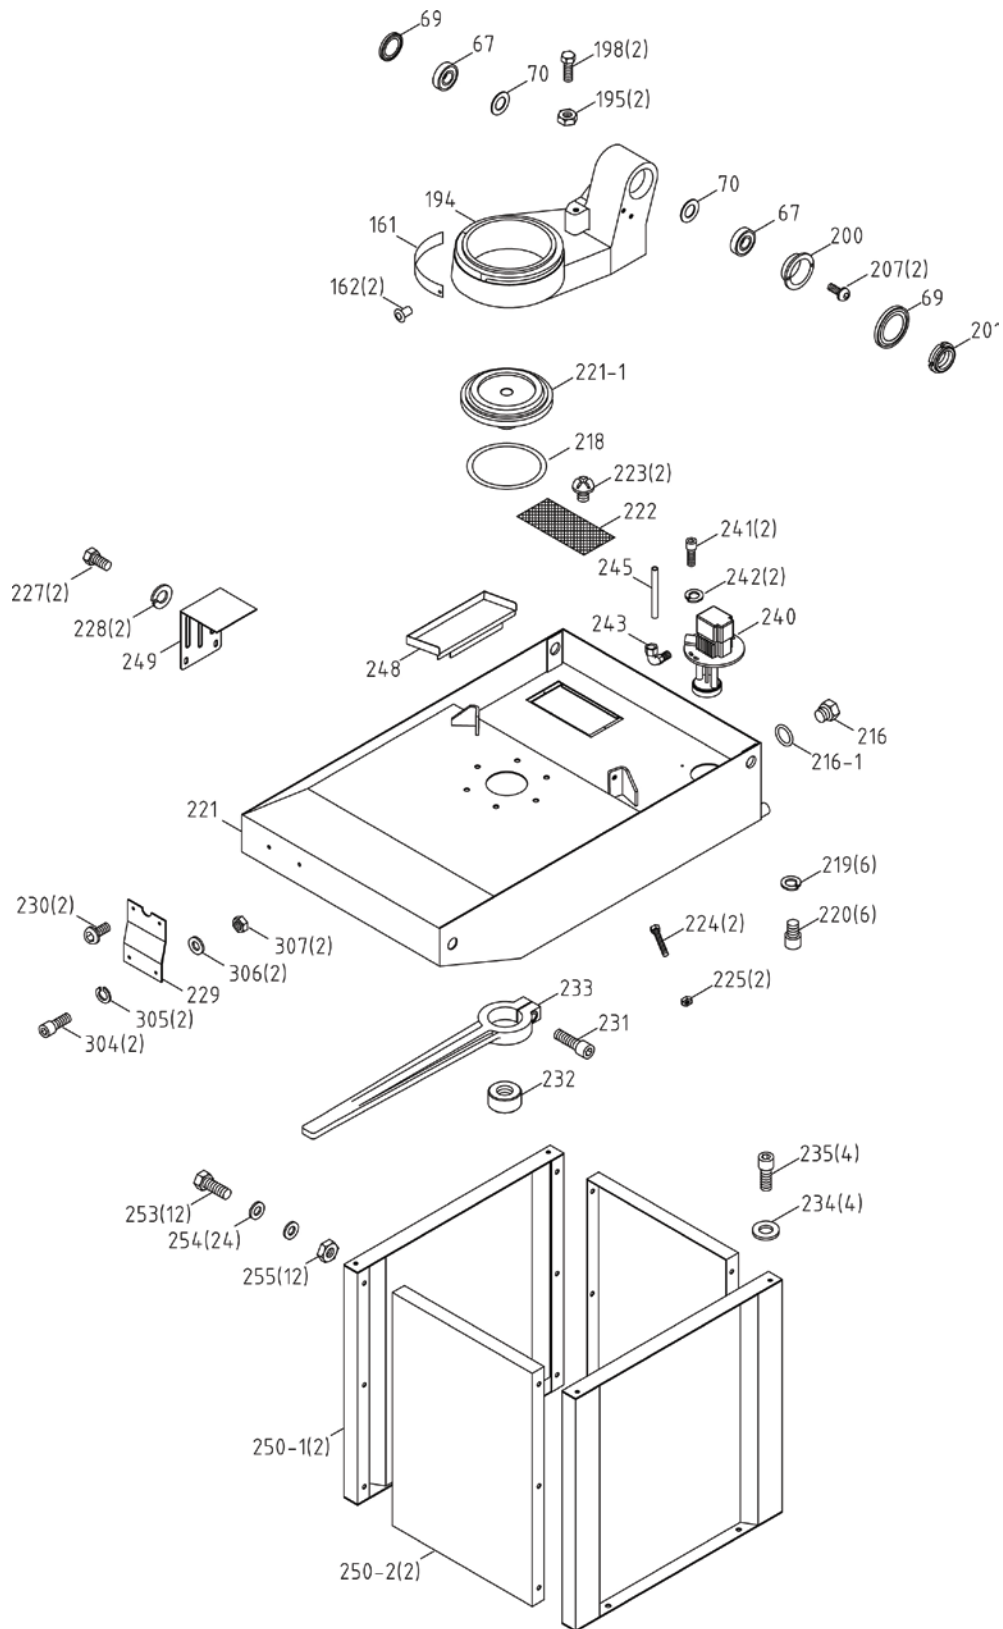

Parts List for the MBS708CS Transmission Assembly

Index No.	Part No.	Description	Size	Qty.
1	MBS708CS-001	Body Frame		1
2	MBS708CS-02	Anchor Block		1
2A	MBS708CS-02A	Anchor Plate		1
2B	MBS708CS-02B	Round Head Screw	M5X10	2
3	MBS708CS-03	Shaft		1
4	TS-1504041	Socket Head Cap Screw	M8X20	1
5	MBS708CS-05	Anti-Chip Cover		2
6	BB-32004	Tapered Roller Bearing	32004	2
7	MBS708CS-07	Washer		1
8	TS-1490081	Hex. Cap Screw	M8X45	1
9	TS-1540061	Hex. Nut	M8	1
11	MBS708CS-11	Thrust Bearing	51203	1
12	MBS708CS-12	Knob		2
13	MBS708CS-13	Blade Tension Handle		1
14	MBS708CS-14	Lock Washer	øD16.3Xø31.5X1.8t	10
15	MBS708CS-15A	Lead Screw		1
16	TS-2310162	Hex. Nut	M16	1
17	TS-1490041	Socket Head Cap Screw	M8x25	3
18	MBS708CS-18	Fixed Block		1
19	MBS708CS-19	Pin	ø 5X40	2
20	TS-1482041	Socket Head Cap Screw	M6X20	2
21	MBS708CS-21	Fixed Block		1
22	TS-2248252	Socket Head Button Screw	M8X25	2
23	TS-1523051	Socket Set Screw	M6X16	4
24	MBS910CS-20	Locking Lever	M10X60	1
25	MBS708CS-25	Blade adjust stick		1
26	TS-1524021	Socket Set Screw	M8X10	2
27	TS-1503021	Socket Head Cap Screw	M6X10	1
28	MBS708CS-28	Connecting Tube		1
29	MBS708CS-29	Handle		1
30	MBS708CS-30	Fixed Plate		1
36-1	TS-1505101	Socket Head Cap Screw	M10X60	1
37	MBS708CS-37	Bearing Shaft		2
38	MBS708CS-38	Blade Adjusting Seat (Front)		1
39-1	TS-2361101	Lock Washer	M10	1
40	MBS708CS-40	Hose Clip		3
41	TS-1533062	Pan Head Screw	M5x20	3
43	MBS708CS-43	Shaft		2
44	BB-608ZZ	Ball Bearing	608ZZ	10
45	MBS708CS-45	C-Retainer Ring	ø8	4
46	MBS708CS-46	Eccentric Shaft		2
47	MBS708CS-47	Round Head Screw	M5X12	2
48	MBS708CS-48	Blade Cover (Front)		1
49S	MBS708CS-49	Power Cutting Bracket Assembly (#49-1~#49-4)		1
49-1	MBS708CS-49-1	Power Cutting Bracket		1
49-2	MBS708CS-49-2	Hex. Socket Head Screw	M3X30	2
49-3	TS-1550041	Flat Washer	M6	2
49-4	TS-1503031	Hex. Socket Head Screw	M6X12	2

Parts List for the MBS708CS Transmission Assembly

Index No.	Part No.	Description	Size	Qty.
50	TS-1550031	Flat Washer	M5	2
51	TS-1540071	Hex. Nut	M10	4
52	TS-2361101	Lock Washer	M10	4
53	MBS708CS-53	Deflector Plate		1
54	MBS708CS-54	Blade Adjusting Seat (Rear)		1
56	MBS708CS-56	Socket Head Button Screw	M8X35	2
57	TS-1550051	Flat Washer	M8	2
58S	MBS708CS-58S	Brush Assembly (#58-1~#58-6)		1
58-1	MBS708CS-58-1	Brush Support		1
58-2	MBS708CS-58-2	Brush		1
58-3	MBS708CS-58-3	Bushing		1
58-5	TS-1523031	Socket Set Screw	M6X10L	1
58-6	MBS708CS-58-6	Bushing		1
61	MBS708CS-61	Cover		1
62	TS-1504031	Socket Head Cap Screw	M8X16	2
64	TS-1524041	Socket Set Screw	M8X16	1
65	MBS708CS-65	Frame Pivot Shaft		1
66	TS-1550061	Flat Washer	M8	2
67	BB-32006	Tapered Roller Bearing	32006	2
69	MBS708CS-69	Anti-Chip Cover		2
70	MBS708CS-70	Privet Shaft Washer		2
71	MBS708CS-71AE	Motor	1Hp/400V/3ph	1
72	TS-1482041	Socket Head Cap Screw	M6X20	4
73	TS-1550041	Lock Washer	M6	4
74GA	MBS708CS-74GA	Gear Box (08050450 and higher))		1
75	MBS708CS-75	Spring Washer	M8	4
76	TS-1490041	Hex. Cap Screw (08050450 and higher)	M8x25	4
77	MBS708CS-77	PU Tube	ø6X800L	1
78	MBS708CS-78	Hose Fitting	ø8X1/4"PT	1
79	MBS708CS-79	Socket Head Cap Screw	M6X15L	2
80	MBS708CS-80	3 Way Valve		1
81	MBS708CS-81	PU Tube	ø6X240L	1
82	MBS708CS-82	Valve	1/8"	2
82A	MBS708CS-82A	Handle		2
83	MBS708CS-83	Hose Fitting	ø6X1/8"PT	4
84	MBS708CS-84	Bushing		1
85	TS-1505031	Socket Head Cap Screw	M10X25	1
86	MBS708CS-86	Washer	M10	1
87	MBS708CS-87	Round Head Key	8X7X50	1
88	MBS708CS-88N	Output Shaft (08050450 and higher))		1
89	MBS708CS-89	Round Head Key	7X7X30	1
90	MBS910CS-90	Ball Bearing	6208-2RS	1
91	MBS708CS-91	Spring		1
92	MBS708CS-92	Spring		1
96	MBS708CS-96	Idler Wheel		1
99	MBS708CS-99	Nut	M20	1
100	MBS708CS-100	Blade	208.5X20X0.9X5/8T	1
101	MBS708CS-101	Drive Wheel		1
102	MBS708CS-102	Drive Shaft Washer		1
103	TS-1505031	Hex. Head Screw	M10X25	1
104	MBS708CS-104	Blade Back Cover		1


**Parts List for the MBS708CS
Transmission Assembly**

Index No.	Part No.	Description	Size	Qty.
105	TS-1503041	Socket Head Cap Screw	M6X16	4
106	TS-1550041	Flat Washer	M6	4
109	TS-1504031	Socket Head Cap Screw	M8x16	2
111	TS-2245162	Socket Head Button Screw	M5X16	2
112	TS-1550031	Flat Washer	M5	2
113	TS-1550031	Flat Washer	M5	1
114	TS-2245122	Socket Head Button Screw	M5X12	1
161	MBS708CS-161	Scale		1
162	MBS708CS-162	Rivet	ø2X6	2
165	MBS708CS-165	Distance Set Rod Assembly (#165-1 to #165-8)		1
165-1	MBS708CS-165-1	Stop Block		1
165-2	TS-1550061	Flat Washer	M8	2
165-3	MBS708CS-165-3	Knob		2
165-4	MBS708CS-165-4	Stock Stop Rod		1
165-5	MBS708CS-165-5	Distance Set Rod		1
165-6	TS-154009	Hex. Nut	M14	1
165-7	MBS708CS-165-7	Scale		1
165-8	MBS708CS-165-8	Rivet	ø2	4
170	MBS708CS-170	Hand wheel		1
171	MBS708CS-171	Pin	ø5X35	1
172	MBS708CS-172	Bearing Cover		1
173	MBS708CS-173	Thrust Bearing	ø30Xø47X3.5	1
174	MBS708CS-174	Vise Handle		1
175	MBS708CS-175	Spring		1
176	MBS708CS-176	Bushing		1
178	TS-1550041	Flat Washer	M6	1
179	MBS708CS-179	Socket Head Cap Screw	M6X15	1
180	MBS708CS-180	Vise Jaw Bracket		1
181	MBS708CS-181	Vise		1
182	TS-1514011	Socket Head Flat Screw	M6X12	2
186	MBS708CS-186	Vise Jaw Bracket		1
190	MBS708CS-190	Lead screw		1
191	TS-1524051	Socket Set Screw	M8X20	1
193	TS-2236911	Socket Head Cap Screw	M6X100	2
194	MBS708CS-194	Swivel Arm		1
195	TS-1540071	Hex. Nut	M10	2
196	MBS708CS-196	Vise Jaw Adjustable Rod		1
197	MBS708CS-197	O-Retainer Ring	ø19.8X ø2.4	1
198	TS-2210451	Hex. Cap Screw	M10X45	2
200	MBS708CS-200	Bushing		1
201	MBS708CS-201	Nut		1
202	MBS708CS-202	Bolt		1
203	MBS708CS-203	Cylinder Assembly		1
204	TS-2360121	Flat Washer	M12	2
205	MBS708CS-205	Hex. Socket Head Screw	M12X80L	1
207	TS-1523051	Socket Set Screw	M6X16	2
208	TS-1540083	Hex. Nut	M12XP1.75	1
210	MBS708CS-210	Cylinder Cover		1
214	MBS708CS-214	Liable for Name Plate		1
215	MBS708CS-215	Control Box Assembly		1
216	MBS708CS-216	Hex Socket Plug	3/8"PT	1
216-1	MBS708CS-216-1	O-Retainer Ring	P14	1

**Parts List for the MBS708CS
Transmission Assembly**

Index No.	Part No.	Description	Size	Qty.
218	MBS708CS-218	O-Retainer Ring	ID170X5.7W	1
219	TS-2361101	Lock Washer	M10	6
220	TS-1505021	Socket Head Cap Screw	M10X20	6
221	MBS708CS-221	Stand		1
221-1	MBS708CS-221-1	Swivel Arm Base		1
222	MBS708CS-222	Filter		1
223	TS-2284082	Pan Head Screw	M4X8L	2
224	TS-1491081	Hex. Cap Screw	M10X50	2
225	TS-1540071	Hex. Nut	M10	2
227	TS-1491031	Hex. Cap Screw	M10X25	2
228	TS-2361101	Lock Washer	M10	2
229	MBS708CS-229	Fixed Plate		1
230	TS-2246102	Socket Head Button Screw	M6X10L	2
231	TS-1505051	Socket Head Cap Screw	M10X35	1
232	MBS708CS-232	Nut		1
233	MBS708CS-233	Adjustable Handle		1
234	TS-1550071	Washer	M10	4
235	TS-1505021	Socket Head Cap Screw	M10X20	4
240	MBS708CS-240E	Pump	1/8Hp/400V	1
241	MBS708CS-241	Cross Round Head Screw	M6X15	2
242	TS-2361061	Lock Washer	M6	2
243	MBS708CS-243	Micro Control Block	3/8"X3/8"	1
245	MBS708CS-245	PU Tube	ø8X1300L	1
248	MBS708CS-248	Fluid Collected Plate		1
249	MBS708CS-249	Feed Support		1
250	MBS708CS-250	Stand Leg Set		1
250-1	MBS708CS-250-1	Stand Leg (front)		2
250-2	MBS708CS-250-2	Stand Leg(Right)(Left)		2
253	TS-1490031	Hex. Cap Screw	M8X20	12
254	TS-1550051	Flat Washer	M8	24
255	TS-1540061	Hex. Nut	M8	12
258	MBS708CS-258	Bracket		1
259	TS-1550031	Flat Washer	M5	2
260	TS-1502021	Socket Head Cap Screw	M5X10L	2
282	MBS708CS-282	Knob		1
283	TS-1504031	Socket Head Cap Screw	M8X16	2
284	MBS708CS-284	Hex. Nut	M8	2
285	TS-2361081	Lock Washer	M8	2
292	TS-1540071	Hex. Nut	M10	2
293	TS-1505061	Socket Head Cap Screw	M10X40	1
294	MBS708CS-294	Control Box Base		1
295	TS-1490031	Hex. Cap Screw	M8X20	2
296	TS-1550061	Flat Washer	M8	2
297	MBS708CS-297	Cylinder Bracket		1
297-1	MBS708CS-297-1	Plate		1
297-2	TS-1502021	Socket Head Cap Screw	M5X10	1
304	TS-1503041	Socket Head Cap Screw	M6X16	2
305	TS-2361061	Lock Washer	M6	2
306	TS-1550041	Flat Washer	M6	2
307	TS-1540041	Hex. Nut	M6	2
308	MBS708CS-308	Blade tension meter		1


**Parts list for MBS-708CS
Breakdown for Gear Box Assembly**

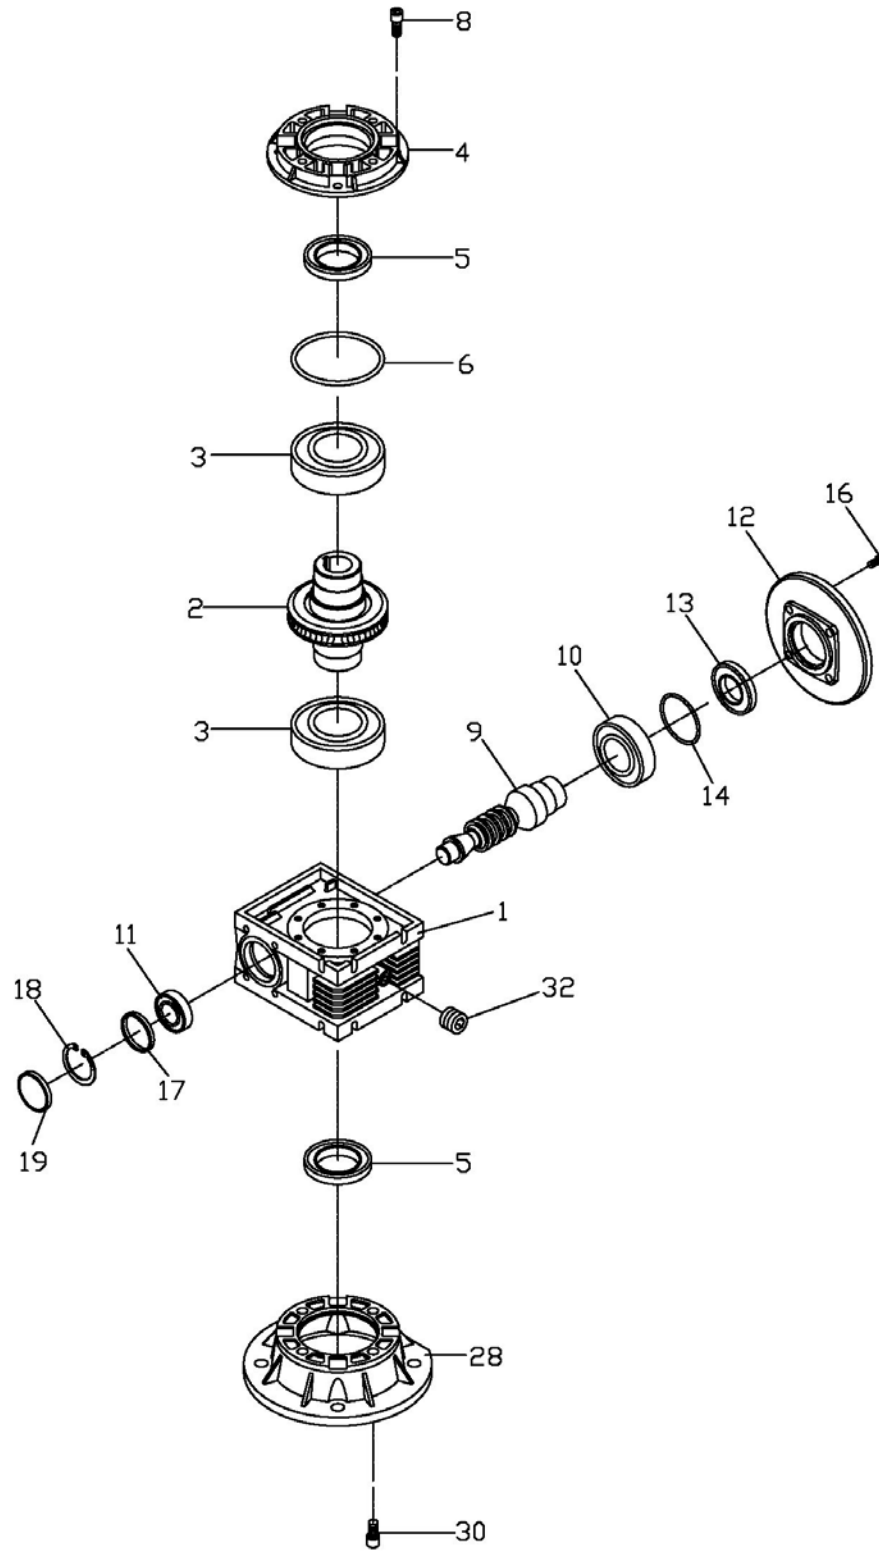

**Parts List for MBS-708CS
Gear Box Assembly**

Index No.	Part No.	Description	Size	Qty.
1	MBS708CS-74GA-1	Gear Box		1
2	MBS708CS-74GA-2	Worm Gear	E=1/28	1
3	BB-6008ZZ	Ball Bearing	6008ZZ	2
4	MBS708CS-74GA-4	Gear Box Cover	TC40x62x7b	1
5	MBS708CS-74GA-5	Oil Seal		2
6	MBS708CS-74GA-6	Oil Seal		1
8	MBS708CS-74GA-8	Socket Star Head Screw	M6x16	8
9	MBS708CS-74GA-9	Worm Shaft		1
10	BB-6006ZZ	Ball Bearing	6006ZZ	1
11	BB-6204ZZ	Ball Bearing	6204ZZ	1
12	MBS708CS-74GA-12	Motor Flange		1
13	MBS708CS-74GA-13	Oil Seal	TC30x47x7b	1
14	MBS708CS-74GA-14	Oil Seal		1
16	MBS708CS-74GA-8	Socket Star Head Screw	M6x16	6
17	MBS708CS-74GA-17	Washer		1
18	MBS708CS-74GA-18	C-Ring		1
19	MBS708CS-74GA-19	Oil Seal		1
28	MBS708CS-74GA-28	Connect Flange		1
30	TS-1504031	Socket Head Cap Screw	M8x16	4
32	MBS708CS-74GA-32	Oil Plug		2

Breakdown for the MBS708CS Electrical Box Assembly

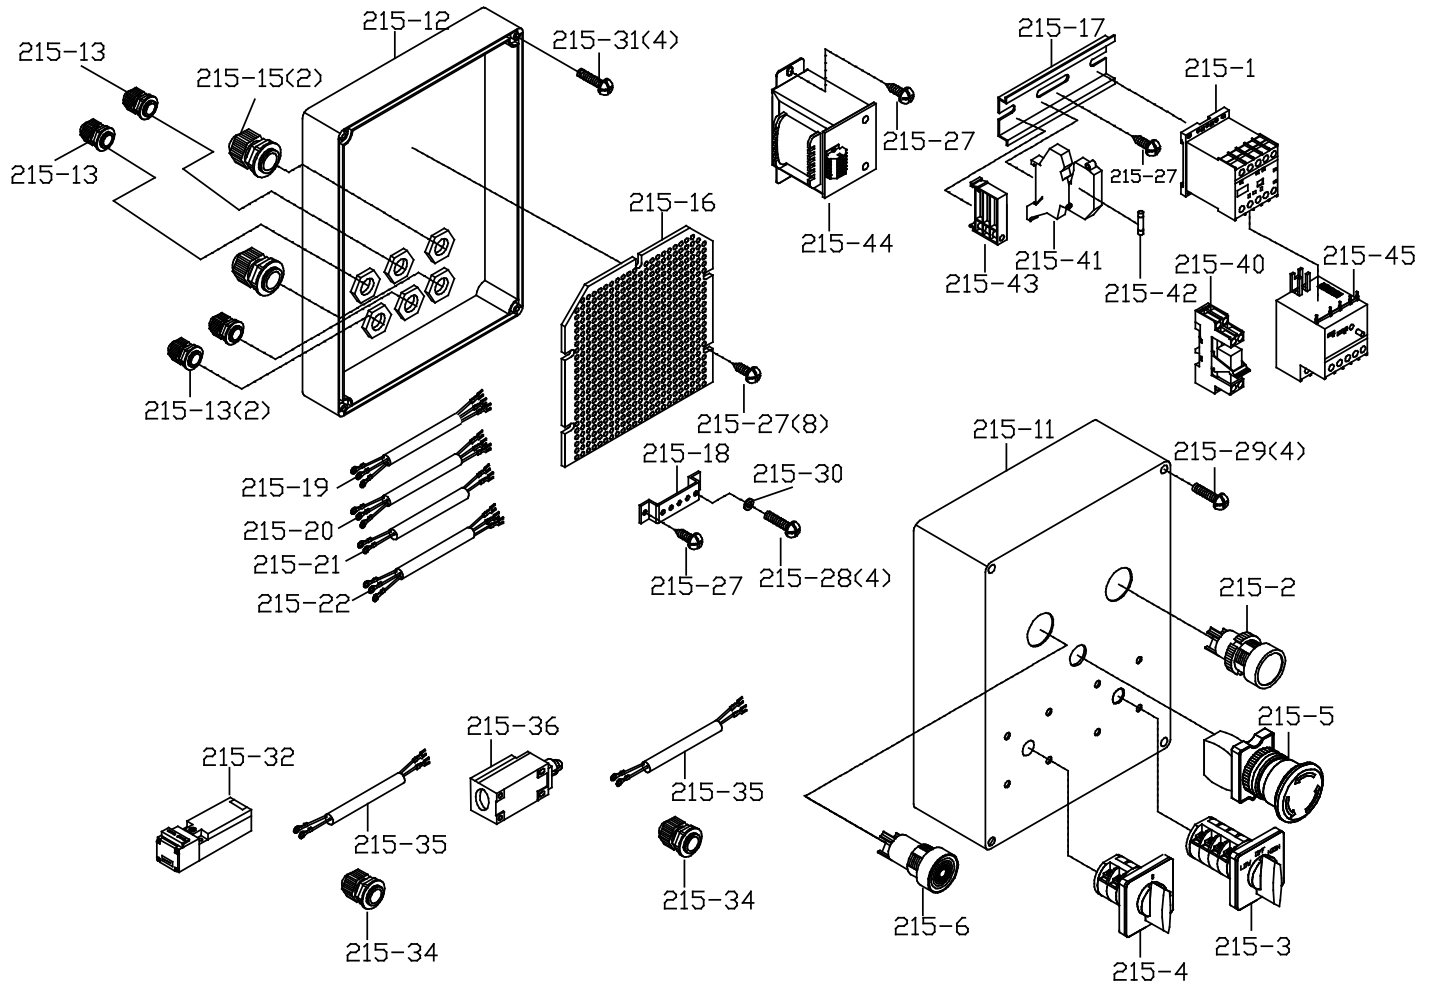

Parts List for the MBS708CS Electrical Box Assembly

Index No.	Part No.	Description	Size	Qty.
215	MBS708CS-215	Control Box Assembly		1
215-1	MBS708CS-215-1	Magnetic-Contact	C-06D	1
215-2	MBS708CS-215-2	Push-Button Switch	NPB-F	1
215-3	MBS708CS-215-3	Choice Pole Switch	600V/20A	1
215-4	MBS708CS-215-4	Choice-Switch	600V/20A	1
215-5	MBS708CS-215-5	Emergency-Stop Switch	HY57B	1
215-6	MBS708CS-215-6	Power Light	NLD-22	1
215-11	MBS708CS-215-11	Box Upper Lib		1
215-12	MBS708CS-215-12	Box Seat		1
215-13	MBS708CS-215-13	Cable-Gland	PG-9	4
215-15	MBS708CS-215-15	Cable-Gland	PG-13.5	2
215-16	MBS708CS-215-16	Net-Pin		1
215-17	MBS708CS-215-17	Din-Rails		1
215-18	MBS708CS-215-18	Grand Copper Pin		1
215-19	MBS708CS-215-19	Power Cable	H07RN-Fx1.5mm ²	1
215-20	MBS708CS-215-20	Motor Cable	1.25mm ² x7C	1
215-21	MBS708CS-215-21	Limit Cable	H05VV-Fx0.75mm ²	1
215-22	MBS708CS-215-22	Pump Cable	H05VV-Fx0.75mm ²	1
215-27	MBS708CS-215-27	Self-tapping Screw	M4X8	10
215-28	MBS708CS-215-28	Cross Round Head Screw crew	M4X6	4
215-29	MBS708CS-215-29	Cross Round Head Screw	M4x12	4
215-30	MBS708CS-215-30	Star Washer	M4	6
215-32	MBS708CS-215-32	Limit Switch for Blade Guard	AZD-S11	1
215-34	MBS708CS-215-34	Cable-Gland	PG-11	2
215-35	MBS708CS-215-35	Limit Cable	H05VV-Fx0.75mm ²	1
215-36	MBS708CS-215-36	Limit Switch for Bow Down	AZD-112	1
215-40	MBS708CS-215-40	Relay	24V	1
215-41	MBS708CS-215-41	Fuse Seat		1
215-42	MBS708CS-215-42	Fuse	2A	1
215-43	MBS708CS-215-43	Fix Block		1
215-44	MBS708CS-215-44	Transformer	400/24V	1
215-45	MBS708CS-215-45	Overload protector	1.8A-2.6A	1

MBS708CS.....50000331T3~400V, 50Hz

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
RD	red	rot	rouge
BN	brown	braun	brun
GNYE	green-yellow	grün-gelb	vert-jaune
GN	green	grün	vert

	meaning of symbol	Bedeutung der Zeichen	interprétation
KM	Magnetic contactor	Hauptschütz	contacteur
FU	fuse	Sicherung	fusible
L	lamp	Anzeigenlampe	lampe d'indication
SE	emergency stop switch	Not-Aus Schalter	arrêt d'urgence
SB1	start button	Ein-Schalter	bouton marche
SC1	choice speed switch	Aus-Schalter	bouton arrêt
SC2	pump switch	Kühlmittel-Schalter	bouton pompe
SQ1	downer limit switch	Positionsendschalter	micro
M	main motor	Hauptmotor	moteur principal
P	pump	Kühlmittelmotor	moteur pompe
SQA	saw lid limit switch	Positionsendschalter	micro
SQB	tension limit switch	Positionsendschalter	micro

